

Hose Reel Kit

Installation Instructions

9.801-023.0 (35-310), 8.904-097.0 (35-315), 9.801-024.0 (35-320)

These instructions cover the installation of Hose Reel Kits # 9.801-023.0, 8.904-097.0, and 9.801-024.0.

Tools Required:

- Adjustable Wrench
- Teflon Tape

Installation

1. Attach hose reel handle shown using three 1/4" screws, nuts and washers. **Note:** Nuts must go on the handle side of the reel to avoid damage to the hose. *See Figure 1.*



Figure 1

2. Using the supplied 1/2" MNPT x 1/2" JIC 90° elbow (steel), wrap the NPT side with Teflon tape and screw into the inlet of the hose reel. Tighten connections carefully with wrench. *See Figure 2.*
3. Using the supplied 3/8" x 3/4" flanged bolts and 3/8" flanged nuts, mount hose reel to mounting bracket. *See Figure 3.*
4. Mount hose reel assembly to machine. Slide hose reel bracket into hose reel mounting post on machine. *See Figure 3.*

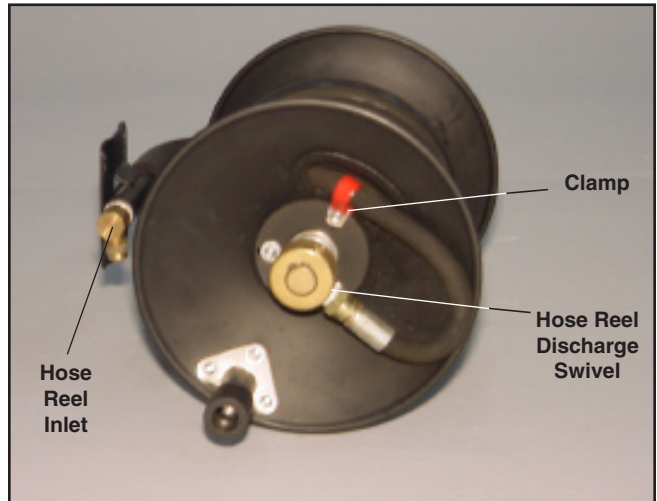


Figure 2

5. With supplied pressure hose, attach quick coupler end to pressure washer discharge and other end to hose reel inlet. Tighten securely.
6. Wrap threads with Teflon tape and attach end of 50' high-pressure hose to hose reel swivel by threading hose through access hole on reel. Tighten securely. *See Figure 2.*
7. Secure hose to reel with clamp and tighten nut as shown. Rotate hose reel to wrap 50' hose around reel. *See Figure 2.*

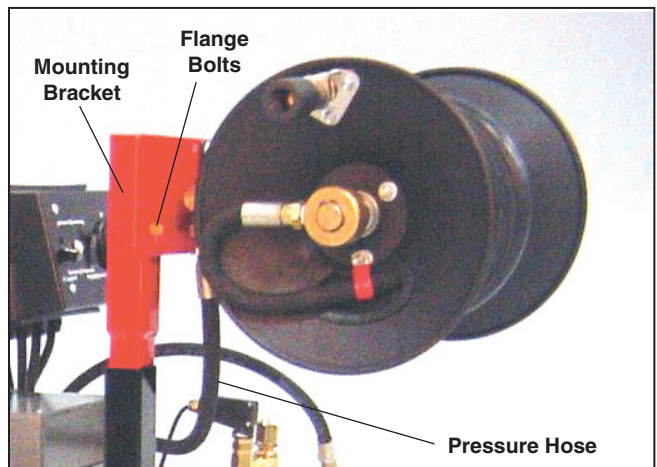


Figure 3